

TPMS VALVES REPAIRING TOOL ASSORTMENT

52818

1,38

10



- Set of multiple tools specially designed for an easy assembly and disassembly of the TPMS sensors.

- ① 2-14 NM
- ② 0,5-3,5 NM
- ③ 2xØ 11, 12mm
- ④ 3x T10, T15, T20
- ⑤ 150mm
- ⑥ 2mm
- ⑦ 0,25 Nm
- ⑧ 0,45 Nm



VALVE CORE TOOL

52653

0,04


10

250

6.000



- To install and remove valves core.

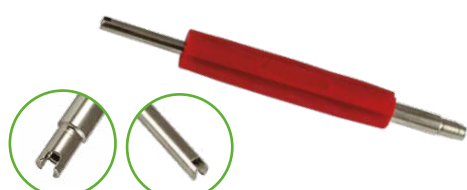

TIRE VALVE CORE

52652

0,03

25

100

7.200



TPMS SENSOR RUBBER VALVE

53723

0,04

4

EU-PRO HYBRID 3.5



- Easy to programme.
- Useful for 98% of the fleet of vehicles in the market.

- Nut Torque: Screw.
- Screw Torque: 1.4Nm.



VALVE CAPS AND VALVE CORE SET

52673

0,23

25

875



ALSO AVAILABLE:



11900



Aluminium caps for valve tire.
4 units / blister.



11901



Green plastic caps for valve tire.
4 units / blister.



11902



Black plastic caps for valve tire.
4 units / blister.

CONTENTS:

11903

16 units aluminium caps for valve tire.

11905

50 units black plastic caps for valve tire.

11907

50 units valve core set high pressure.

11904

50 units green plastic caps for valve tire.

11906

50 units valve core set.

11960

Core pullers.

TYRE REPAIR KIT

52662

0,66

10

440



1x Perforation auger
1x Wicks insertion auger
1x Tool to inflate tires
4x Compressed air bottles 16gr
1x Cutter
10x Wicks
1x Tire valve core

52663

1,23

10

320



1x Wicks insertion auger
1x Tip for wicks insertion auger
1x Perforation auger
1x Cutter
20x Wicks
1x Lubricant

WICK REPLACEMENT
FOR REF. 52662/52663

12973

0,34

10

500



x5



PERFORATION AUGER
FOR REF. 52663

13806

0,35

5

50



WICK INSERTION AUGER
FOR REF. 52663

13805

0,5

50



FOR TIRES