



424 N2

Handle for windshields

- For car windshield removal



| à gr | code | |
|------|-----------|---|
| 107 | U04240004 | 1 |



424 N3

Steel wire for windshields

- For car windshield removal



| L m | mm | code | |
|-----|---------|-----------|---|
| 26 | 0,7x0,7 | U04240005 | 1 |



424 N4

Suction cups for transporting and positioning of windshields

- Adjustable suction cups Ø 117mm for flat and curved surfaces
- Maximum load 80 kg
- Propylene cups for excellent resistance to chemicals
- Polyamide handle and polypropylene body
- Before use, check that the suction cups are clean and has no cracks or damage
- Periodically clean the suction cups with mild detergents
- Do not use pointed or sharp instruments to remove the suction cup from the surface
- Do not use on too coarse, porous, dirty or wet materials
- Do not use with cranes or lifting machinery



| Ø mm | load capacity max Kg | L mm | code | |
|------|----------------------|------|-----------|---|
| 117 | 80 | 375 | U04240008 | 1 |



424 N5

Nylon belt for windshields

- To be used together with 424 N4 while fitting windshields



| L m | belt length mm | code | |
|-----|----------------|-----------|---|
| 4 | 25 | U04240007 | 1 |



424 TN

Windshield wiper arms puller

- For removing wiper arms without damaging the body



| Ø capacity max mm | code | |
|-------------------|-----------|---|
| 44 | U04240020 | 1 |



425

Wheel weight pliers

- For fitting and removing wheel balancing weights and for loosening or compressing the retaining springs



| L mm | code | |
|------|-----------|---|
| 250 | U04250001 | 1 |



425 C

Valve extractor

- For disassemble/assemble tyre inflation valves



| L mm | code | |
|------|-----------|---|
| 123 | U04250003 | 1 |



425 S

Valve disassembler with silencer

- To assemble / disassemble the tyre inflation valves
- Reduces air noise in pressures below 85 dB (A)
- Safety against valve expulsion
- Can be used on any type of tyre
- Does not slow down the rate of deflation of the tire



| à gr | code | |
|------|-----------|---|
| 10 | U04250004 | 1 |



425 TPMS

Kit with 10 tools to assemble / disassemble the tyre valves with Tyre Pressure Monitoring System (TPMS)

- Allows operator to work correctly and without damage on every kind of valve with TPMS system
- The torque screwdriver with capacity 1,4÷10 Nm ensures precise setting of the necessary torque
- Long hexagonal sockets and TORX® bits allow operator to work correctly on valve body
- The special Aluminum lever is designed to remove and replace the sealing gasket
- Supplied in ABS box
- Internal bi-colour foam for quick check of contents



| pcs | description | item/size |
|-----|--|----------------|
| 2 | Long hexagonal sockets/11-12 | 235 1/4 EL |
| 1 | Valve extractor | 425 C |
| 1 | Bi-colour foam module (empty) | 519 M 425TPMSV |
| 1 | Empty ABS case - size L | 606 L |
| 1 | Socket-holder bit -1/4" | 660 Q |
| 3 | Bits for TORX® screws - 1/4"/T10-T15-T20 | 664 TX |
| 1 | Torque screwdrivers | 824 A/1,4÷10 |
| 1 | Ratchet handle for torque screwdrivers | 824 C |

| LxPxH mm | à Kg | code | |
|------------|------|-----------|---|
| 360x160x65 | 1,2 | U04250005 | 1 |



426 A

Trim clip removal pliers

- To extract fasteners securing trims and panels without damaging



| L mm | code | |
|------|-----------|---|
| 235 | U04260002 | 1 |